## Representative Asbestos Dust Collector Preventive Maintenance

## 1. Every six months\*

- Replace pre-filters every six months or sooner if pressure drop reached 1" water.
- Check for unusual noise or vibration.
- Check belts for wear or adjustment. Replace if necessary.
- \* Perform initial inspection in July 2006.

## 2. Annually

- Replace HEPA filters every twelve months or sooner if pressure drop reached 2" water.
- Calibrate Magnehelic pressure drop gauge.
- Calibrate pressure gauge on glove box.
- Check for unusual noise or vibration.
- Check belts for wear or adjustment. Replace if necessary.

## 3. Recommended Minimum Stores Spare Parts

- 2 Pre-filters part # A2126-24242TA
- 2 HEPA filters Pat# A2126-24242412G
- 1 Matched set drive belts (2)

